



## QUICK INSTALLATION GUIDE


# ITT4050B

Thermal Transfer / Direct Thermal  
Label Printer




## Quick Installation Guide

### Printer Overview

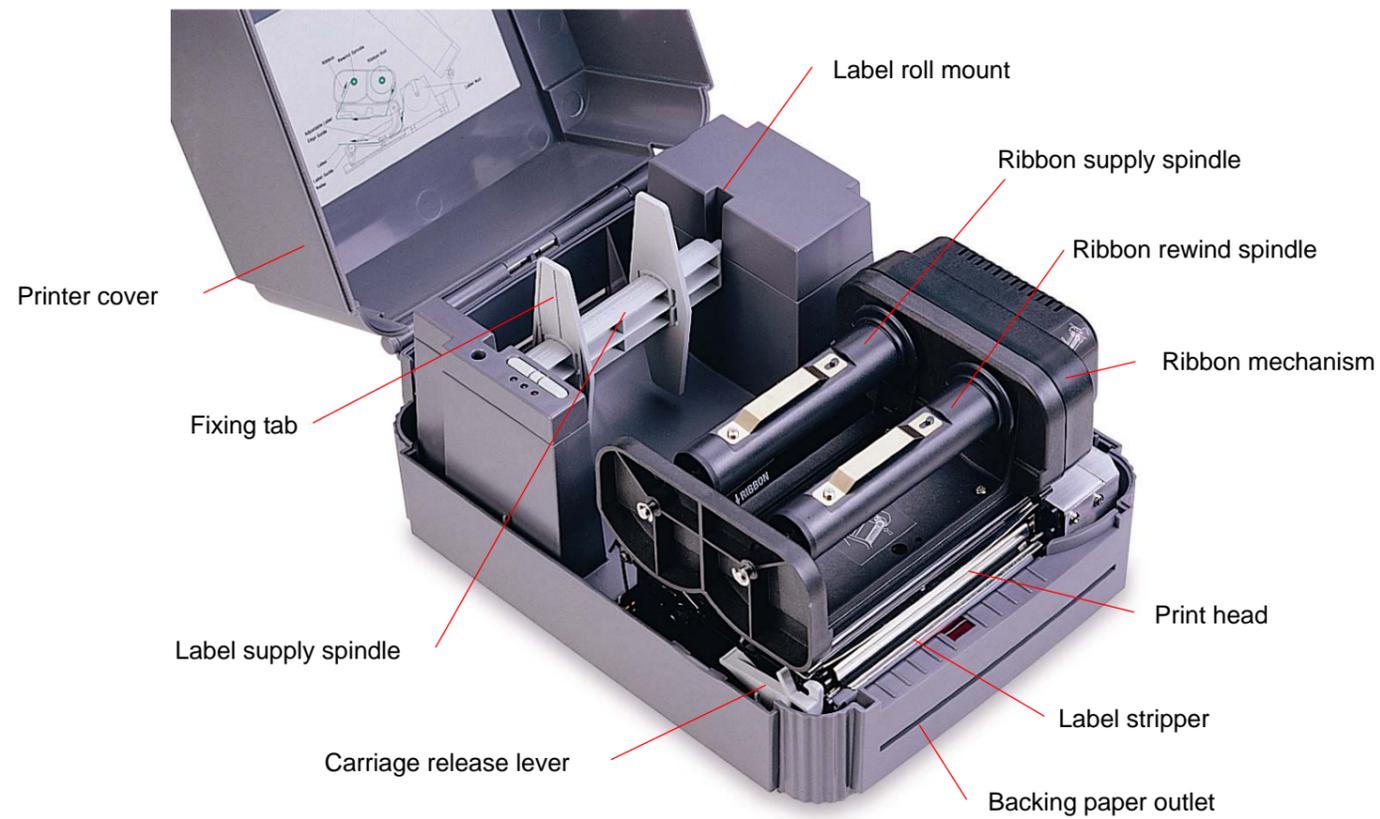



### Setting up the Printer

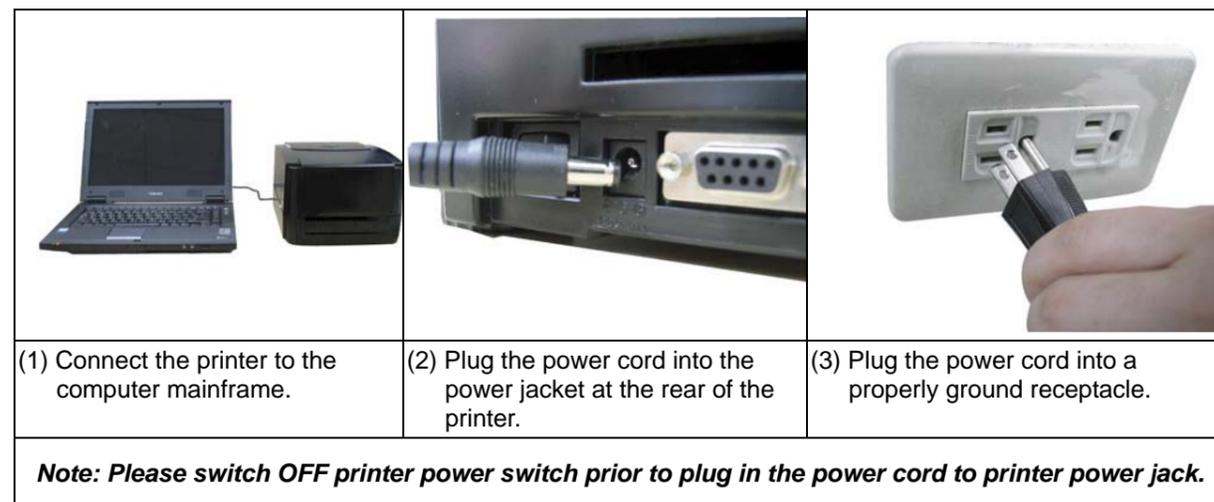

### Loading the Ribbon



## Loading the Label

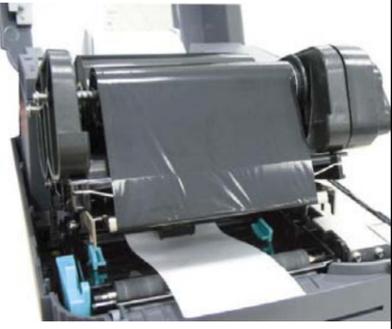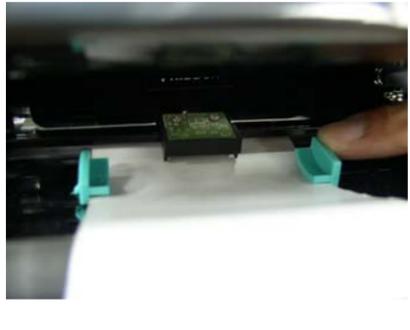		
(1) Insert a label spindle into a paper roll. Insert fixing tabs into the spindle.	(2) Place the label onto the (external) label roll mount.	(3) Install the label so that it goes (when using an external label roll mount: through the label feed slot) in the direction of the  LABEL label and under the ribbon mechanism to lay upon the platen.
		
(4) Adjust the label guide to fit the width of the label.	(5) Engage the printer carriage.	(6) Close the printer cover.
<p><b>Note:</b> When switched on, the printer will automatically detect whether ribbon is installed to set printer to direct thermal or thermal transfer mode. As such, to use thermal transfer mode, be sure to install the ribbon, the label, and engage the ribbon mechanism before you switch on the printer. To use direct thermal mode, install the label and engage the ribbon mechanism before switching on the printer.</p>		

## Power-on Utilities

### ■ Self Test

Power off the printer, install the ribbon and the label first. Press the **FEED** button and then turn on the printer power. Do not release the **FEED** button until the printer feeds labels. The printer performs the following items:

1. Calibrate label pitch.
2. Print out thermal print head check pattern.
3. Print the internal settings.
4. Enter into dump mode.

### ■ Gap Sensor Calibration

This utility is used to calibrate the sensitivity of the gap sensor. Users may have to calibrate the gap sensor for two reasons:

1. Using a new type of label
2. Initializing the printer

**Note:** The **ERROR LED** may flash if the gap sensor is not calibrated properly.

Please follow the steps below to calibrate the gap sensor.

1. Turn off printer power and install blank (i.e., without any logos or characters) label roll on the printer power.
2. Hold down the **PAUSE** button while turning on printer power.
3. Release **PAUSE** button when the printer feeds labels. Do not turn off printer power until the printer stops and the two green LEDs light on.

### ■ Printer Initialization

Printer initialization sets printer parameters to default values.

Please follow the steps below to initialize the printer:

1. Turn off the printer power.
2. Hold down the **PAUSE** and **FEED** buttons while turning on the printer power.
3. Do not release the buttons until the three LEDs flash in turn.

**Note:** When printer initialization is done, please calibrate the gap sensor again.

For further information on printer operation, please refer to the user's manual in driver CD disc.

Specifications, accessories, parts and programs are subject to change without notice.